

# **DOUBLE WHEELIE BIN STORE ASSEMBLY INSTRUCTIONS**



**2 PERSON ASSEMBLY**

# CONTENTS

## SCREWS

LARGE X 8  
MEDIUM X 18  
SMALL X 37

## LID X 2



## DOOR X 2



## SIDE 1 X LEFT 1 X RIGHT




## BACK X 2



## BLANK X 2



## PADBOLT X 2

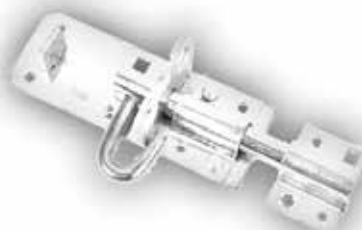

## BASE BAR X 2




## TOP BAR X 2




## Step 1 :

**Attach left side to the back from the inside with 3 medium screws.**

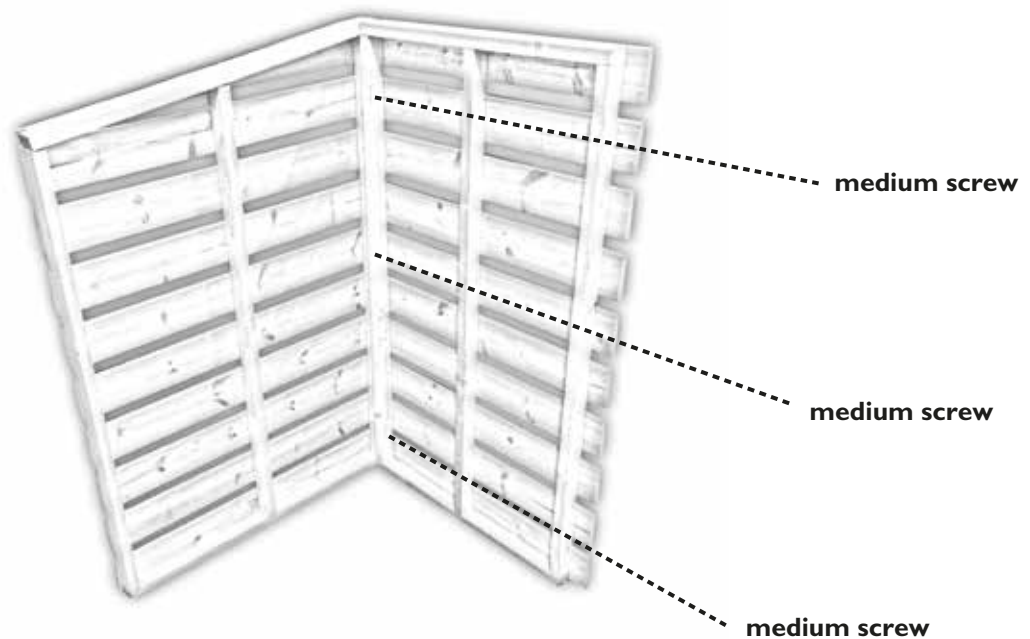

## Step 2 :

**Attach the with no pilot holes blank to the back using 3 medium screws and the top and bottom bar using 4 large screws.**

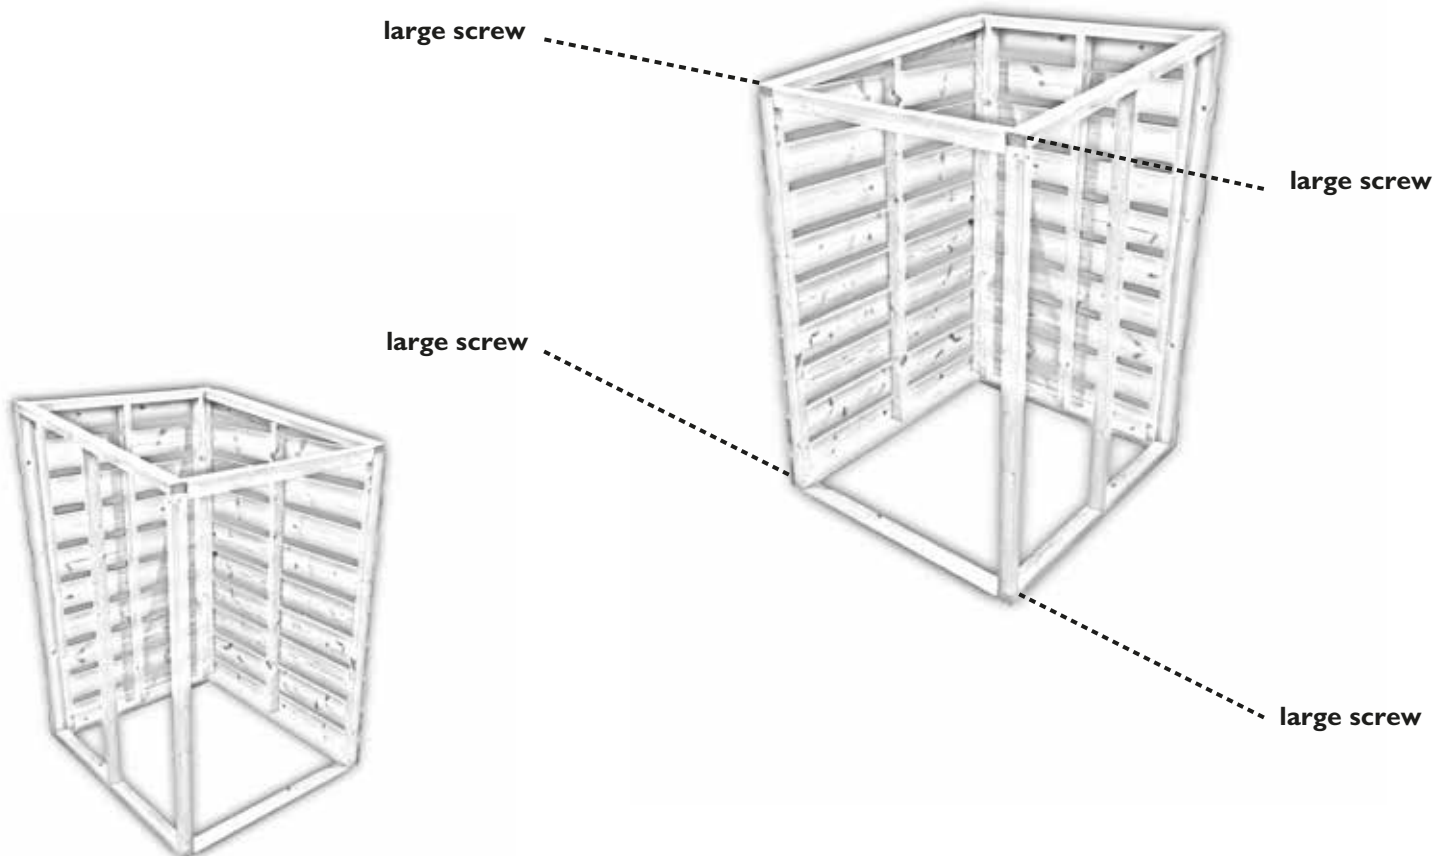

Repeat step 2 to make another side for the right side using the blank with pilot holes.

**Step 3 :**

**Screw together the two frames with 6 medium screws through the pilot holes.**



**Step 4 :**


**Attach the lid with 6 small screws, line the lid up with the back of the bin store.**



Repeat step 4 for other lid.

### **Step 5 :**


**Attach door to right side frame inside with 6 small screws. Align hinge with front edge and door into opening leaving equal gap top and bottom.**

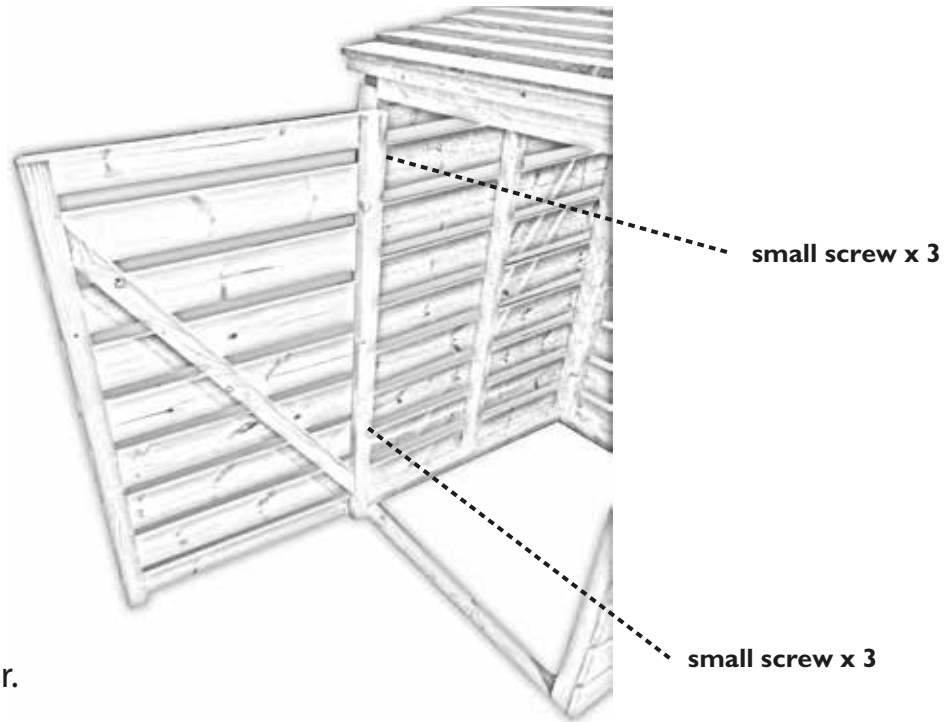

Repeat step 5 for other door.

### **Step 6 :**


**Attach the chain to the inside of the lid with a small screw.**

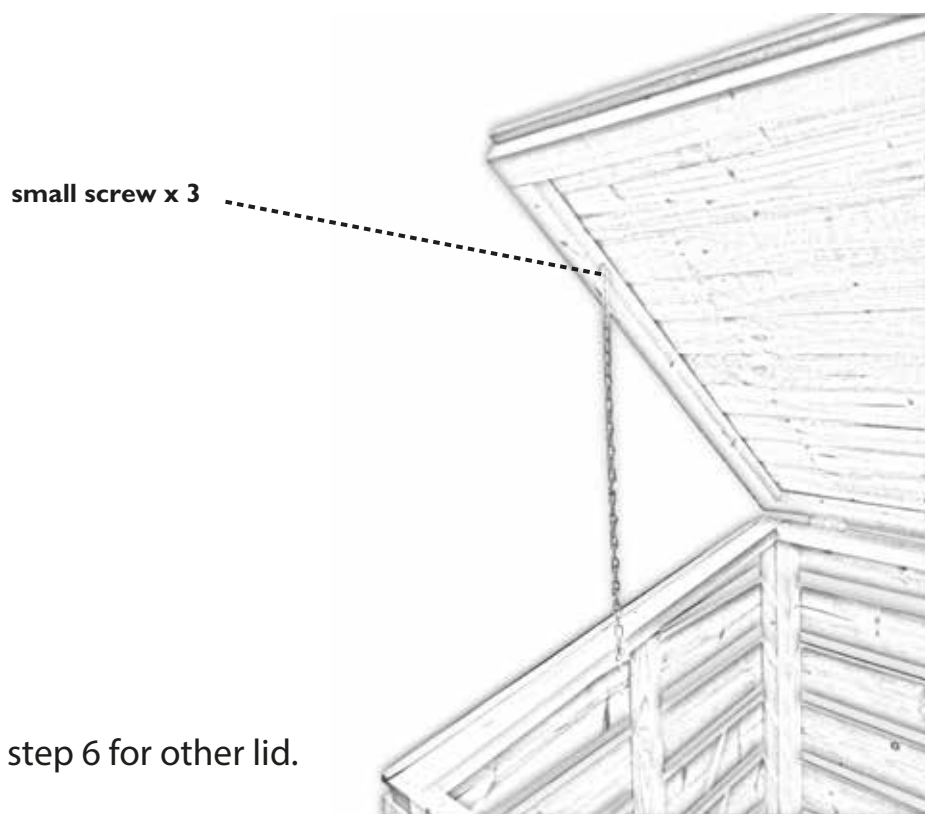

Repeat step 6 for other lid.

## Step 7 :

**Attach the padbolt to the door with small screws and the catch to the frame also with small screws.**

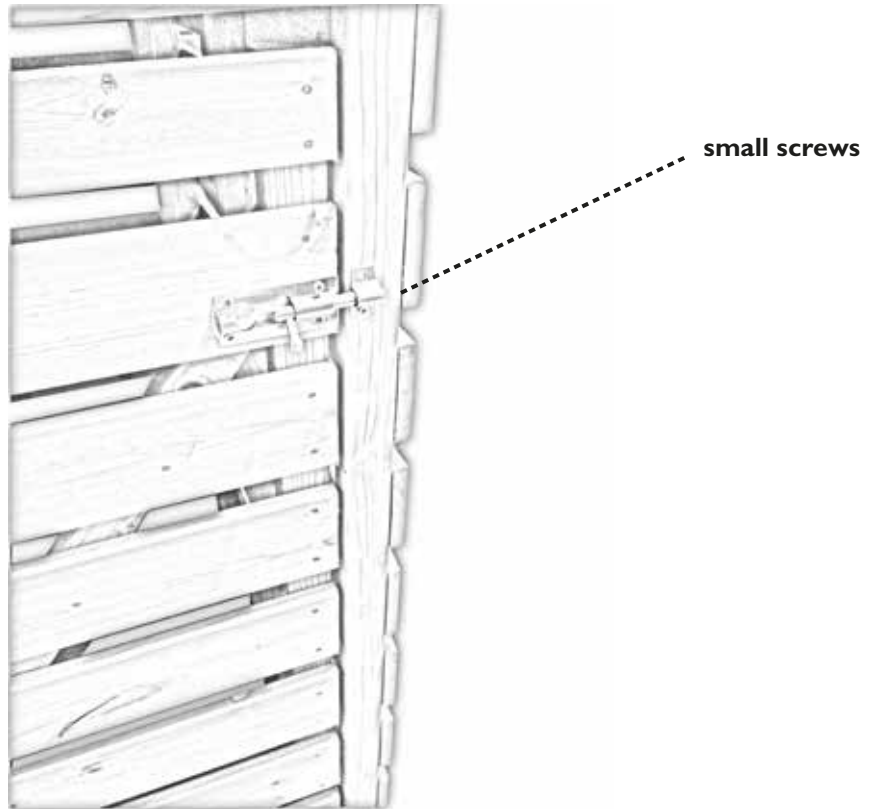

Repeat step 7 for other door.

**Your bin store is complete, use the chain to attach to the bin lid handle so the bin lid lifts with the bin store lid.**

