

# **TRIPLE WHEELIE BIN STORE ASSEMBLY INSTRUCTIONS**



**2 PERSON ASSEMBLY**

# CONTENTS

## SCREWS

LARGE X 18

MEDIUM X 30

SMALL X 57

## LID X 3



## DOOR X 3



## SIDE 1 X LEFT 1 X RIGHT



## BACK X 3



## BLANK X 4



## PADBOLT X 3



## BASE BAR X 3




## TOP BAR X 3




## Step 1 :

**Attach left side to the back from the inside with 3 medium screws.**

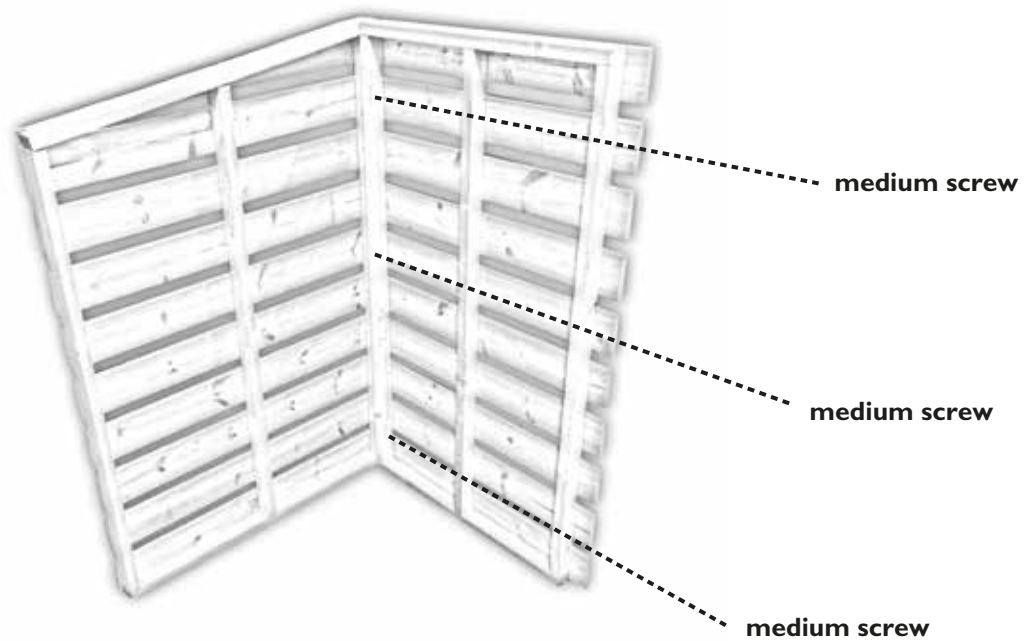

## Step 2 :


**Attach the blank with pilot holes to the left to the back using 3 medium screws and the top and bottom bar using 4 large screws.**

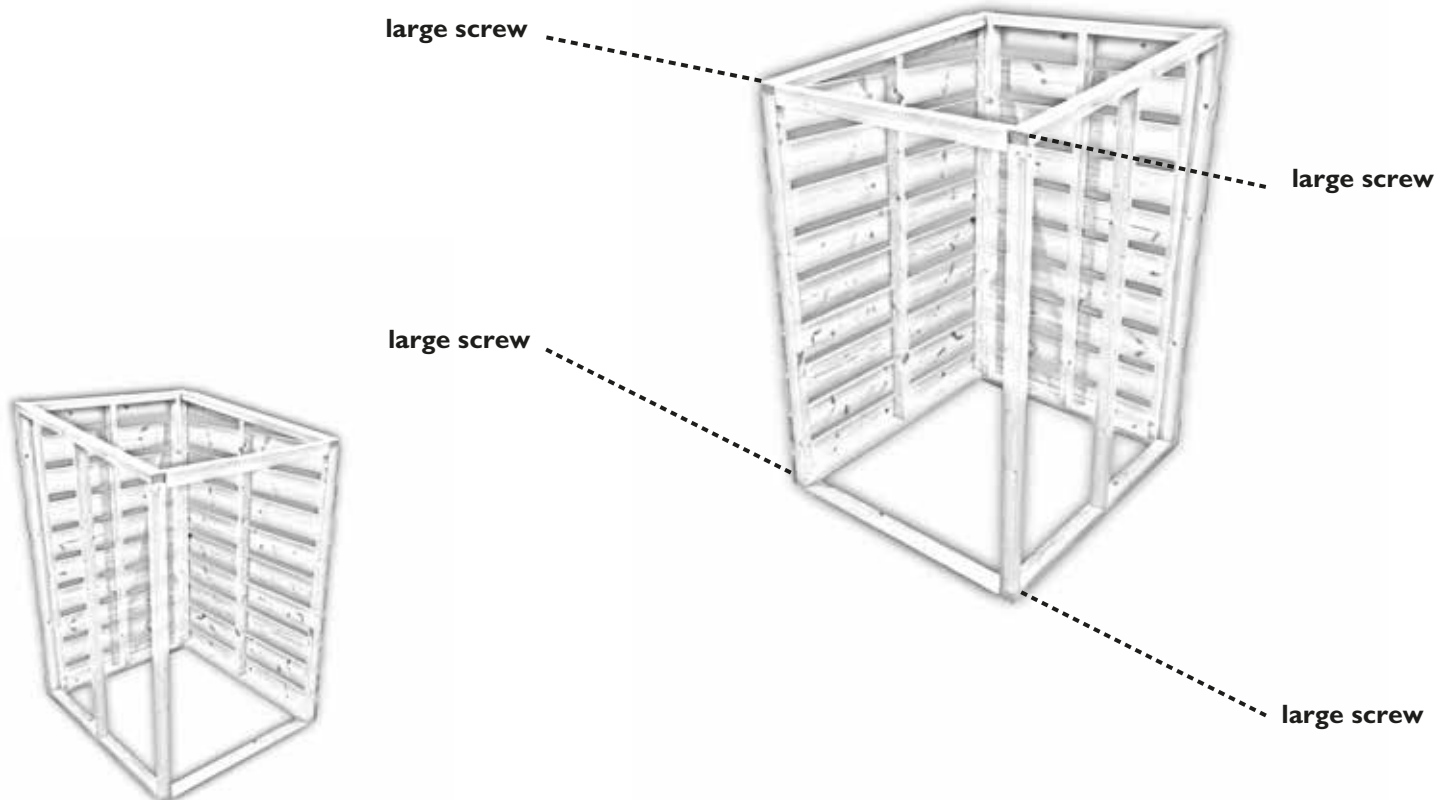

Repeat step 2 to make another side for the right side using the blank with pilot holes to the right.

### Step 3 :

Take a back and attach 2 blanks without pilot holes with medium screws from the inside, then attach the top and bottom bar using 4 large screws.

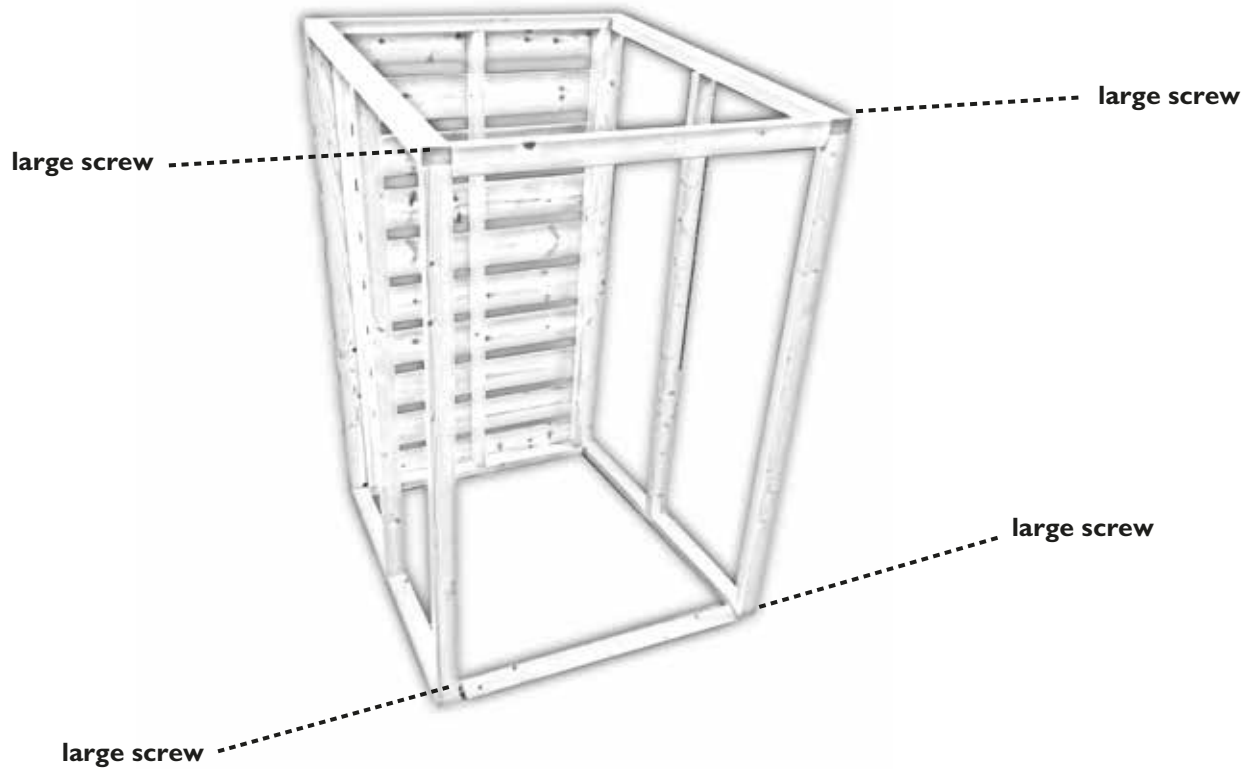

### Step 4 :

Connect the ends to the centre with medium screws through the pilot holes.




**Step 5 :**

**Attach the centre lid first (smaller in width) using 6 small screws. Then attach the other two lids in the same way.**



**Step 5 :**

**Attach door to left side frame inside with 6 small screws. Align hinge with front edge and door into opening leaving equal gap top and bottom.**

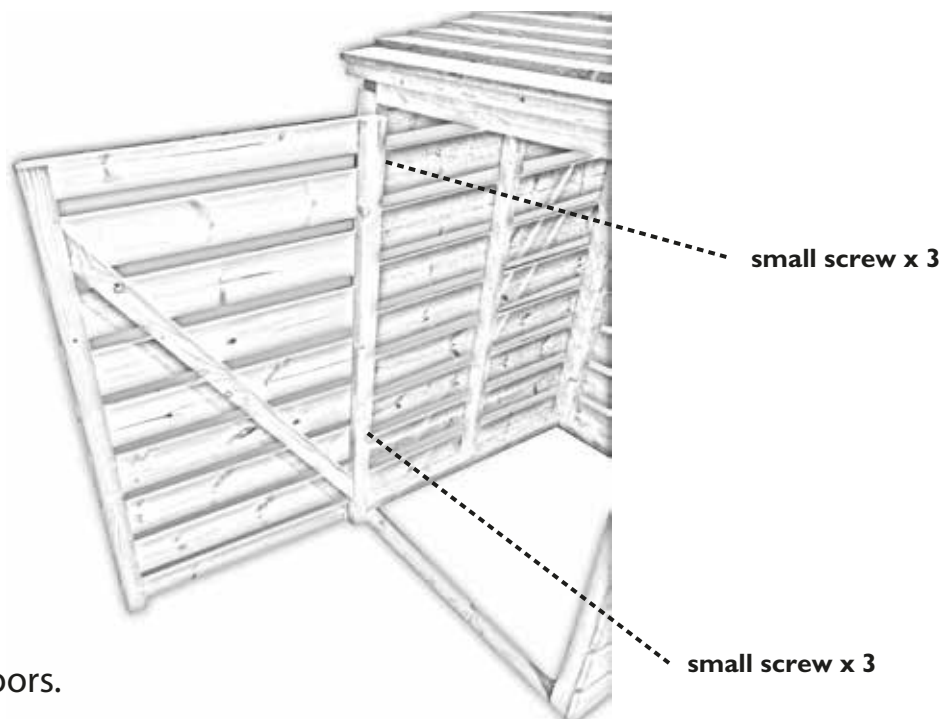


Repeat step 5 for other 2 doors.

### **Step 6 :**

**Attach the chain to the inside of the lid with a small screw. You can attach the chain through the bin lid to open it.**

small screw x 3

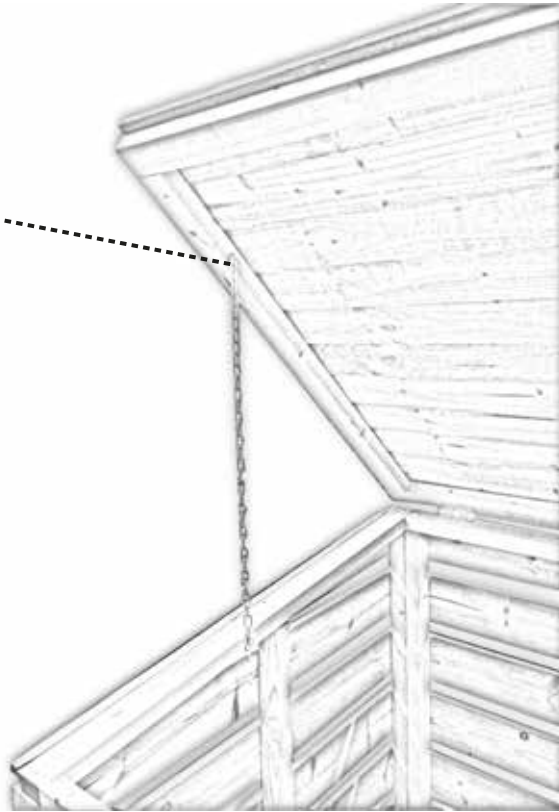


Repeat step 6 for other 2 lids.

### **Step 7 :**

**Attach the padbolt to the door with small screws and the catch to the frame also with small screws.**

small screws

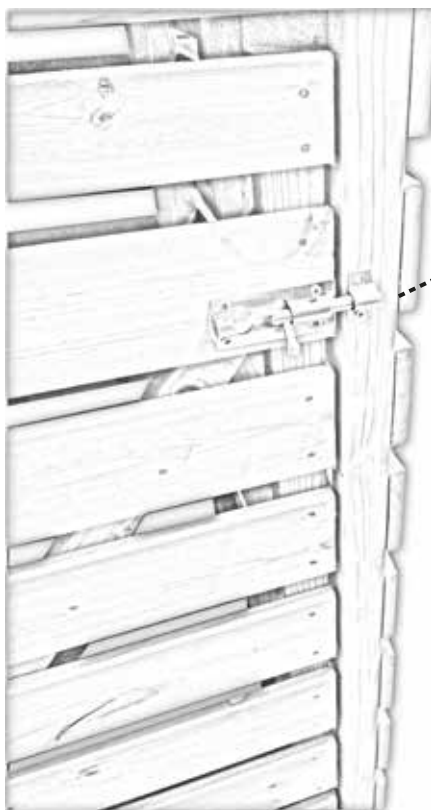

Repeat step 7 for other 2 doors.